
Microwave Movement Sensor

This product is fitted with a microwave movement sensor. Please see below detailed operating instructions.

Technical Specifications:

recimied openiodions.							
Operating voltag	е	220 ~ 240V AC 50/60Hz					
Rated load		400W (Capacitive load) 800W (Resistive load)					
Stand-by power		≤0.5W					
	Ceiling mounted height: 3m	100% / 75% / 50% / 25% / 10%					
Sensitivity	Ceiling mounted height: 6m*	100% / 75% / 50%					
Wall mounted height: 2m		100% / 75% / 50% / 25% / 10%					
Hold-time		5s / 30s / 90s / 3min / 20min / 30min					
Daylight sensor		2Lux / 10Lux / 25Lux / 50Lux / Disable					
Microwave frequency		$5.8~\mathrm{GHz}~\pm75\mathrm{MHz}$					
Transmitting power		1mW Max.					
Detection range	Ceiling mounted height: 3m	3- 6m (radius)					
Wall mounted height: 1.5-2m		12-15m					
Detection angle		360° (Ceiling) / 120° (Wall)					
Working temperature		-20°C ∼ 60°C					

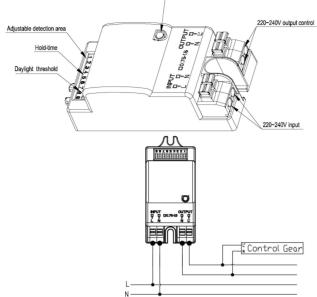

^{*50%, 75%, 100%} detection sensitivity is workable when installed at 6m mounting height. Only 10%, 25% sensitivity is not able to detect motion signal.

Settings:																				
1. Sensitivity						2.	Hold-tin	пе							3. Daylight sensor					
Sensitivity can be adjusted by selecting the combination on the DIP switches for different applications.			rei	Hold-time refers to the time period that the light remains 100% on if no more movement is detected.						Different daylight threshold can be preset on DIP switches. Light will always turn on upon movement if daylight sensor is disabled.										
I –100%		1	2	3		1	– 5s			4	5	6			I – 2Lux		7	8	9	
II – 75%	I	•	•	•	100%	l II	- 30s	Ä	Ι		•		5s		II – 10Lux	I	•		•	2Lux
III − 50% 📮	II	0	•	•	75%	l II	I – 90s	Ė	II	0	•		30s		III – 25Lux 📮	II	•	•	0	10Lux
IV - 25%	III		0		50%	1	/ – 3min	0	III		0		90s		IV – 50Lux	III	0		0	25Lux
V - 10%	IV	0	0	•	25%		– 20min		IV	0	\circ		3min		V – Disable	IV	•	0	0	50Lux
	V	0	0	0	10%	V	1 – 30min		V	•	•	0	20min			V	0	0	0	Disable*
									VI	0	0	0	30min		*Disable means the daylight set on light once motion is detected					

Trouble shooting:

Malfunction Cause Remedy	Cause	Remedy					
	Incorrect light-control setting selected	Adjust daylight threshold setting					
The light will not come on	Faulty lamp	Replace lamp					
	No power supply	Check power to sensor					
The lamp is always on	Continuous movement in the detection zone	Check detection area setting					
	The sensor is not mounted for reliably detecting movement	Securely mount enclosure					
The lamp is on without any identifiable movement	Movement occurred, but not identified by the sensor (Movement behind wall, movement of small object in immediate lamp vicinity etc.)	Reduce sensitivity. Check the movement behind walls to avoifacilities such as water pipe, fan, which may mis-trigger the sensor.					
The lamp will not work despite movement	Rapid movements are being suppressed to minimize malfunctioning or the detection radius is too small.	Check detection area setting					

Care and Safety

We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish. For your safety, always switch off the power supply before cleaning.

For further information, please visit https://www.lighting-info.co.uk/103937

V7 18/09/2023

UK Manufacturer: BH17 7BY EU Manufacturer: Brilliant AG, Brilliantstrasse 1, D-27442 Gnarrenburg



Instruction manual

HeroPro Mini CCT Microwave Emergency

103937





Thank you for purchasing this light fitting. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Please retain these instructions for future reference.

Warning

This light fitting is double insulated and does not require connection to an earth circuit.

Please read these instructions carefully before commencing any work.

This unit must be fitted by a competent and qualified electrician.

Install in accordance with the IEE Wiring regulations and current Building Regulations.

Check the pack and make sure you have all the parts listed.

To prevent electrocution switch off at the mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge.

If you are in any doubt, please consult a qualified electrician.

This light fitting should be connected to a circuit with a 30mA RCD fitted.

If replacing an existing fitting, make a careful note of the connections.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Lavout

Plan the desired layout of these fittings carefully, ensuring the cables will reach the distances between each light fitting.

Avoid locating any cables in positions that would cause a hazard. Position cables and junction boxes (not supplied) away from areas where they may be at risk from being cut, trapped or damaged.

The mains supply cable must have a minimum cross section area of 1.0mm². Cables must be protected using suitable conduit or plastic trunking.

Installation

Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, carefully note the position of each set of wires.

Note the switch is turned off before installation.

The ceiling surface must be flat and smooth to ensure a good fit.

Ensure that the screws and cable entry points are sealed to maintain the IP rating of the product.

- Twist and remove the lamp cover from the product, keep safe for refitting later.
- Turn the clip to loose the LED tray in the rear casing.
- Using the rear casing as a template mark the position to drill out the fixing holes. Take care to avoid damaging any concealed wiring and pipes.
- Fix the rear casing into the position using the installation plugs and screws.
- Pull the cable through the cable entry hole and seal to maintain the IP rating and wire as detailed Wiring Diagram.

Technical data

Supply Voltage

220-240 V∼, 50 Hz

Bulb Type:

12/9/6W LED module (SMD) CCT, 3000/4000/6000K

This product contains a light source of energy efficiency class **D**.



Non-replaceable



Replaceable control gear by a professional



Conformity with all relevant UKCA Directive requirements.



Conformity with all relevant EC Directive requirements.



The power supply is Double Insulated and does not require connection to an Earth circuit.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.



This product is not suitable for dimming.



This product is rated at IP65



This product is rated at IK10.

Battery parameters:					
Lumens	120Lm in EM mode				
Duration	3 hours (180 Minutes)				
Operating Temperature	0°C - 50°C				
Maximum Operating Humdity	90%				
Change over time	Approximately 1s				
Battery Specification	LifePO4 3.2V 1500mAh				
Battery Charge Time	24 Hours				
Battery warranty	2 years				

 Unscrewed the battery box cover and then connect the battery DC connector together before commissioning.

- Refit the LED tray back into the rear casing and lock the clip.
- Twist the lamp cover back onto the product and lock in place.
- \bullet Replace fuse or circuit breaker and switch on. Your light is now ready for use.




The wattage is changeable between 12W/9W/6W wattage using the wattage switch on the driver before installation.



 $The \ colour \ is \ changeable \ between \ 3000/4000/6000K \ using \ the \ CCT \ switch \ on \ the \ driver \ before \ installation.$




Choose your preferred wattage and colour before installing by wattage switch or CCT switch on the driver. Note: Befeore you change the wattage or colour, please turn off the power switch for safety.

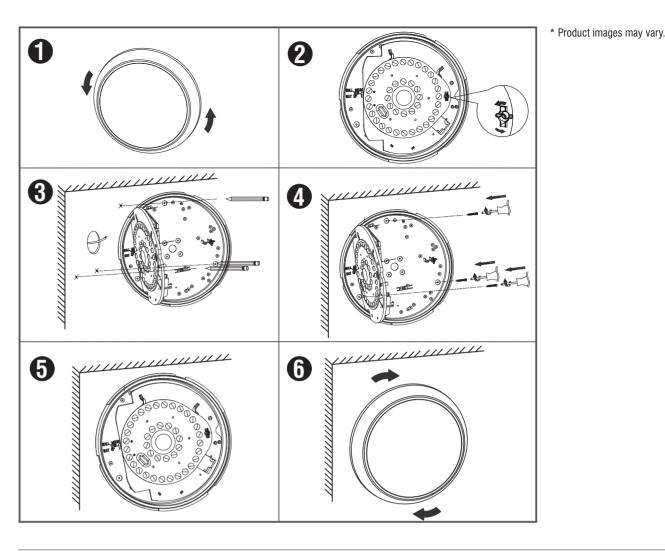

Wiring

- This product is double insulated and must not be earthed.
 If there are any incoming earth cables, they must be joined together and well insulated with good quality insulation tape. This is to ensure earth continuity throughout your property.
- Having correctly identified the wiring from your existing light fitting, connect to the quick fit connection block in the following way, using the supplied link cables where necessary.

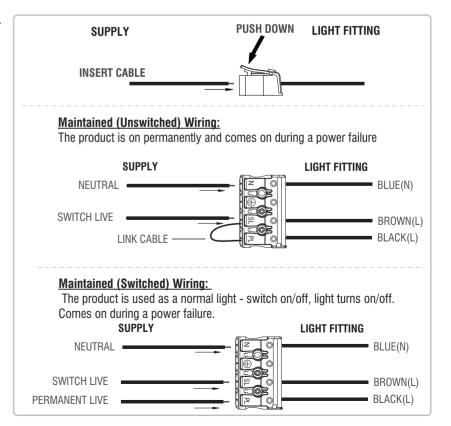

Check that...

- · You have correctly identified the wires.
- · The connections are tight.
- No loose strands have been left out of the connection block