
# **Microwave Movement Sensor**

This product is fitted with a microwave movement sensor. Please see below detailed operating instructions.

### **Technical Specifications:**

9	220 ~ 240V AC 50/60Hz						
	400W (Capacitive load) 800W (Resistive load)						
	≤ 0.5W						
Ceiling mounted height: 3m	100% / 75% / 50% / 25% / 10%						
Ceiling mounted height: 6m*	100% / 75% / 50%						
Wall mounted height: 2m	100% / 75% / 50% / 25% / 10%						
	5s / 30s / 90s / 3min / 20min / 30min						
	2Lux / 10Lux / 25Lux / 50Lux / Disable						
ency	$5.8~\mathrm{GHz}~\pm75\mathrm{MHz}$						
/er	1mW Max.						
ection range   Ceiling mounted height: 3m   3- 6m (radius )							
Wall mounted height: 1.5-2m	12-15m						
	360° (Ceiling) / 120° (Wall)						
ture	$-20^{\circ}\text{C} \sim 60^{\circ}\text{C}$						
	Ceiling mounted height: 3m Ceiling mounted height: 6m* Wall mounted height: 2m  PRICY  PRICY  Ceiling mounted height: 3m Wall mounted height: 3m Wall mounted height: 1.5-2m						

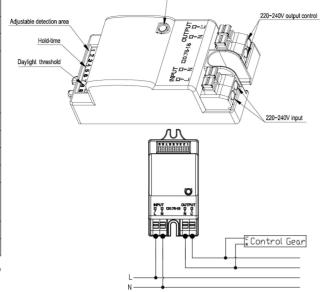

 $<sup>^\</sup>star50\%, 75\%, 100\%$  detection sensitivity is workable when installed at 6m mounting height. Only 10%, 25% sensitivity is not able to detect motion signal.

Settings:																			
1. Sensitivity						2. Hold-tin	ne							3. Daylight sensor					
Sensitivity can be combination on t applications.						Hold-time refers to the time period that the light remains 100% on if no more movement is detected.			t	Different daylight threshold can be preset on DIP switches. Light will always turn on upon movement if daylight sensor is disabled.									
I –100%		1	2	3		I – 5s			4	5	6			I – 2Lux		7	8	9	
II – 75%	Ι	•	•	•	100%	II - 30s	ä	Ι	•	•		5s		II – 10Lux	I	•	•	•	2Lux
III − 50% 📮	II	0	•	•	75%	III - 90s	Ţ	II	0			30s		III – 25Lux	II	•	•	0	10Lux
IV – 25%	III	•	0		50%	IV – 3min	O	III		$\circ$		90s		IV – 50Lux	III	0	•	0	25Lux
V - 10%	IV	0	0		25%	V – 20min		IV	0	$\circ$		3min		V – Disable	IV	•	0	0	50Lux
	V	0	0	0	10%	VI – 30min		V	•	•	0	20min			V	0	0	0	Disable*
						VI O O 30min			*Disable means the daylight ser on light once motion is detecte										

### Trouble shooting:

Malfunction Cause Remedy	Cause	Remedy					
	Incorrect light-control setting selected	Adjust daylight threshold setting					
The light will not come on	will not come on Faulty lamp Repla						
	No power supply	Check power to sensor					
The lamp is always on	Continuous movement in the detection zone	Check detection area setting					
	The sensor is not mounted for reliably detecting movement	Securely mount enclosure					
The lamp is on without any identifiable movement	Movement occurred, but not identified by the sensor (Movement behind wall, movement of small object in immediate lamp vicinity etc.)	Reduce sensitivity.     Check the movement behind walls to avoid facilities such as water pipe, fan, which may mis-trigger the sensor.					
The lamp will not work despite movement	Rapid movements are being suppressed to minimize malfunctioning or the detection radius is too small.	Check detection area setting					

# **Care and Safety**

We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish. For your safety, always switch off the power supply before cleaning.

For further information, please visit https://www.lighting-info.co.uk/95542

V7 18/09/2023

**UK Manufacturer:** BH17 7BY EU Manufacturer: Brilliant AG, Brilliantstrasse 1, D-27442 Gnarrenburg



Instruction manual

# **HeroPro CCT Microwave Emergency**

95542, 103940





www.saxbylighting.com

Thank you for purchasing this light fitting. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Please retain these instructions for future reference.

#### Warning

This light fitting is double insulated and does not require connection to an earth circuit.

Please read these instructions carefully before commencing any work.

This unit must be fitted by a competent and qualified electrician.

Install in accordance with the IEE Wiring regulations and current Building Regulations.

Check the pack and make sure you have all the parts listed.

To prevent electrocution switch off at the mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge.

If you are in any doubt, please consult a qualified electrician.

This light fitting should be connected to a circuit with a 30mA RCD fitted.

If replacing an existing fitting, make a careful note of the connections.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

#### Lavout

Plan the desired layout of these fittings carefully, ensuring the cables will reach the distances between each light fitting.

Avoid locating any cables in positions that would cause a hazard. Position cables and junction boxes (not supplied) away from areas where they may be at risk from being cut, trapped or damaged

The mains supply cable must have a minimum cross section area of 1.0mm<sup>2</sup>. Cables must be protected using suitable conduit or plastic trunking.

The products can be wall or ceiling mounted. If wall mounting ensure that the power supply is at the bottom.

#### Installation

Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, carefully note the position of each set of wires.

Note the switch is turned off before installation.

The ceiling surface must be flat and smooth to ensure a good fit. Ensure that the screws and cable entry points are sealed to maintain the IP rating of the product.

- Twist and remove the lamp cover from the product, keep safe for refitting later.
- Turn the clip to loose the LED tray in the rear casing.
- Using the rear casing as a template mark the position to drill out the fixing holes. Take care to avoid damaging any concealed wiring and pipes.
- Fix the rear casing into the position using the installation plugs and screws.
- Pull the cable through the cable entry hole and seal to maintain the IP rating and wire as detailed Wiring Diagram.



For the 95542 is the 18W/14W/9W selectable



For the 103940 is the 28W/24W/20W selectable

The colour is changeable between 3000/4000/6000K using the CCT switch on the driver before installation. 6000K 4000K 3000K



Choose your preferred wattage and colour before installing by wattage switch or CCT switch on the driver. Note: Befeore you change the wattage or colour, please turn off the power switch for safety.

#### Technical data

Supply Voltage

220-240 V~. 50 Hz

Bulb Type: 95542----18/14/9W LED module (SMD) CCT, 3000/4000/6000K 103940---28/24/20W LED module (SMD) CCT, 3000/4000/6000K

This product contains a light source of energy efficiency class **D**.



Non-replaceable light source



Replaceable control gear by a professional

CA

Conformity with all relevant UKCA Directive requirements.

Conformity with all relevant EC Directive requirements.

The power supply is Double Insulated and does not require connection to an Earth circuit.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.



This product is not suitable for dimming.



This product is rated at IP65



This product is rated at IK10 for 95542.




This product is rated at IK08 for 103940.

Battery parameters:				
Lumens	120Lm in EM mode			
Duration	3 hours (180 Minutes)			
Operating Temperature	0°C - 50°C			
Maximum Operating Humdity	90%			
Change over time	Approximately 1s			
Battery Specification	LifePO4 3.2V 1500mAh			
Battery Charge Time	24 Hours			
Battery warranty	2 years			

- Unscrewed the battery box cover and then connect the battery DC connector together before commissioning.
- Refit the LED tray back into the rear casing and lock the clip.
- Twist the lamp cover back onto the product and lock in place.
- Replace fuse or circuit breaker and switch on. Your light is now ready for use.

The wattage is changeable between the diffrent wattage using the wattage switch on the driver before installation.

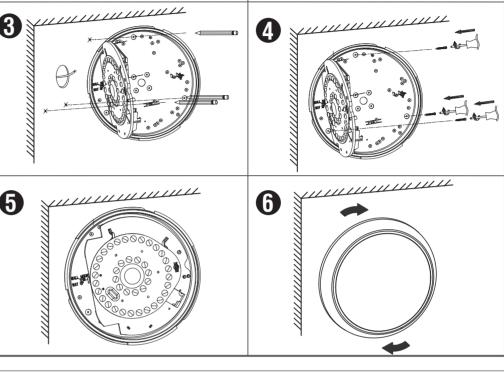

2

\* Product images may vary.

# Bezels for 95542 only

The following individual casings are available for purchase separately.

95545: Chrome plain

95548 · Black plain

95551 : Anthracite grey plain

95546: White evelid

95549 · Black evelid

95552: Anthracite grey eyelid

95547: White arill

95550 : Black grill


95553: Anthracite grey grill

## Wiring

1

• This product is double insulated and must not be earthed. If there are any incoming earth cables, they must be joined together and well insulated with good quality insulation tape. This is to ensure earth continuity throughout your property.

• Having correctly identified the wiring from your existing light fitting, connect to the quick fit connection block in the following way, using the supplied link cables where necessary.

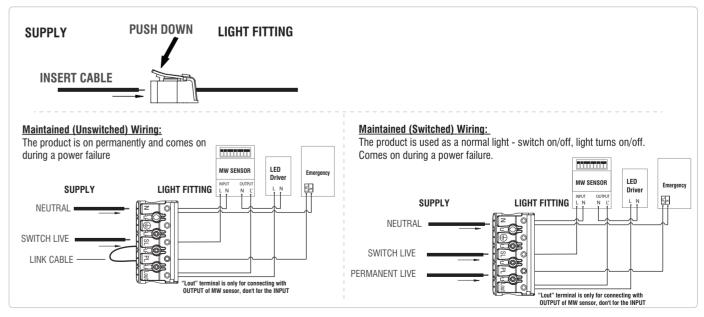

#### Check that...

- You have correctly identified the wires.
- · The connections are tight.
- No loose strands have been left out of the connection block