
Microwave Movement Sensor

This product is fitted with a microwave movement sensor. Please see below detailed operating instructions.

Technical Specifications:

Operating voltage		$220 \sim 240V \text{ AC } 50/60 \text{Hz}$			
Rated load		400W (Capacitive load) 800W (Resistive load)			
Stand-by power		≤0.5W			
Sensitivity	Ceiling mounted height: 3m	100% / 75% / 50% / 25% / 10%			
	Ceiling mounted height: 6m*	100% / 75% / 50%			
	Wall mounted height: 2m	100% / 75% / 50% / 25% / 10%			
Hold-time		5s / 30s / 90s / 3min / 20min / 30min			
Daylight sensor		2Lux / 10Lux / 25Lux / 50Lux / Disable			
Microwave frequency		$5.8 \text{ GHz} \pm 75 \text{MHz}$			
Transmitting power		1mW Max.			
Detection range	Ceiling mounted height: 3m	3- 6m (radius)			
	Wall mounted height: 1.5-2m	12-15m			
Detection angle		360º (Ceiling) / 120º (Wall)			
Working temperature		$-20^{\circ}C \sim 60^{\circ}C$			
*50% 75% 100% dot	action consitivity	is workable when installed at 6m mounting height Only 10% 25%			

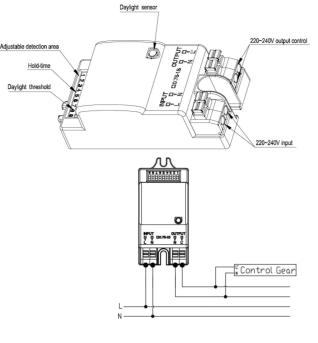

Instruction manual


Seran Microwave Bulkhead

78607, 78608

*50%, 75%, 100% detection sensitivity is workable when installed at 6m mounting height. Only 10%, 25% sensitivity is not able to detect motion signal.

Settinas:

1. Sensitivity of combination applications	can be n on tl					0
I –100%			1	2	3	
II – 75%	Å	Ι				100%
III – 50%	Å	II	\bigcirc			75%
IV - 25%	0	III		0		50%
V- 10%		IV	\bigcirc	0		25%
		V	0	0	0	10%

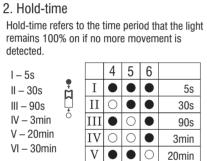


20min

VI O O O 30min

3. Daylight sensor

Different daylight threshold can be preset on DIP switches. Light will always turn on upon movement if daylight sensor is disabled.

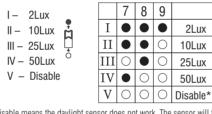

*Disable means the daylight sensor does not work. The sensor will tur on light once motion is detected regardless of ambient light level.





Trouble shooting:

Malfunction Cause Remedy	Cause	Remedy
	Incorrect light-control setting selected	Adjust daylight threshold setting
The light will not come on	Faulty lamp	Replace lamp
	No power supply	Check power to sensor
The lamp is always on	Continuous movement in the detection zone	Check detection area setting
The lower is on without only	The sensor is not mounted for reliably detecting movement	Securely mount enclosure
The lamp is on without any identifiable movement	Movement occurred, but not identified by the sensor (Movement behind wall, movement of small object in immediate lamp vicinity etc.)	 Reduce sensitivity. Check the movement behind walls to avoid facilities such as water pipe, fan, which may mis-trigger the sensor.
The lamp will not work despite movement	Rapid movements are being suppressed to minimize malfunctioning or the detection radius is too small.	Check detection area setting

For further information, please visit https://www.lighting-info.co.uk/78607

V6 04/010/2023 UK Manufacturer: BH17 7BY EU Manufacturer: Brilliant AG, Brilliantstrasse 1, D-27442 Gnarrenburg







Thank you for purchasing this light fitting. Please read the instruction carefully before use to ensure safe and satisfactory operation of this product. Please retain these instruction for future reference.

Warning

This light fitting is double insulated and does not require connection to an Earth circuit.

Please read these instructions carefully before commencing any work.

This unit must be fitted by a competent and gualified electrician

Install in accordance with the IEE Wiring regulations and current Building Regulations.

Check the pack and make sure you have all the parts listed.

To prevent electrocution switch off at the mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge. If you are in any doubt, please consult a qualified electrician.

This light fitting should be connected to a fused circuit.

If replacing an existing fitting, make a careful note of the connections.

This system contains non-replaceable parts and cannot be serviced. If damage occurs the part should be scrapped.

Take care not to drill into any pipes or mains cables beneath the surface during mounting holes preparation

This product is suitable for installation on surfaces with normal flammability e.g. wood, plasterboard and masonry. It is not suitable for use on highly flammable surfaces (e.g. polystyrene, textiles).

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Layout

Plan the desired layout of these fittings carefully, ensuring the cables will reach the distances between the junction box and the light fitting.

Avoid locating any cables in positions that would cause a hazard. Position cables and junction boxes (not supplied) away from areas where they may be at risk from being cut, trapped or damaged.

The mains supply cable must have a minimum cross section area of 1.0mm².

Cables must be protected using suitable conduit or plastic trunking.

Take care not to drill into any pipes or mains cables beneath the surface during mounting holes preparation.

This product can be ceiling or wall mounted. If wall mounting, note the position of the "This Way Up" marked on the back of the product and ensure it is correctly oriented.

If this unit is being fitted in a room containing a bath or shower, a 30mA RCD must be used - in accordance with IEE regulations.

This product is suitable for use in living areas. Bathroom Zone 2 and outsides of zones.

Installation


Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, carefully note the position of each set of wires. Note that the power needs to be isolated/switched off at the fuse board.

Ensure that the screws and cable entry points are sealed to maintain the IP rating of the product.


- · Undo screws and remove diffuser.
- Drill holes in the back of your fitting for your fixing screws, take care and drill gently to ensure a clean hole through. Use a drill bit sized appropriately to your fixing screws (not supplied).
- Using the back of your fitting as a template, mark the position of your fixing holes on your mounting surface.
- Prepare the holes in your mounting surface as appropriate for your fixings.
- Pierce the rubber grommet in the back of your fitting making a hole just large enough to make a tight fit around the incoming mains cable.
- Thread the cable through the grommet and offer the fitting to the ceiling / wall
- · Secure the fitting in place. Note, if protection against ingress of moisture is required, the heads of screws must be covered with a silicone or similar sealant.
- · Check that the grommet is still correctly fitted in the cable entry hole and around the incoming cable.
- Wire as the details wiring diagram
- Restore the power and switch on.

Wirina

 Having correctly identified the wiring from your existing light fitting. • This product is double insulated and must not be earthed. If there are any incoming earth cables, they must be joined together and well connect to the quick fit connection block in the following way:tt insulated with good quality insulation tape. This is to ensure earth continuity throughout your property.

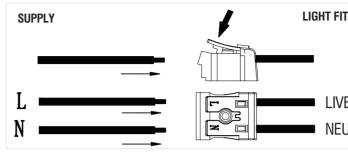

Technical data

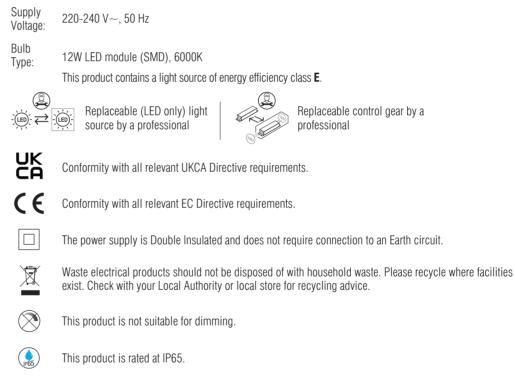


Care and Safety

We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish. For your safety, always switch off the power supply before changing lightbulbs, or cleaning.



This bulb is protected by a shade. This part must be replaced immediately should the shade become cracked or damaged. This fitting must not be used without the shade in place.

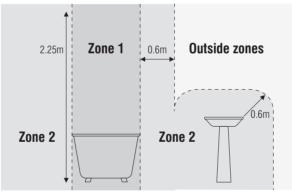

Check that
You have correctly identified the wires.
The connections are tight.
• No loose strands have been left out of the connection block.
When completed, ensure that there are no bare or loose
strands of wire exposed, and cover all exposed areas of the connection block with 2 layers of insulation tape.