## Microwave Movement Sensor

This product is fitted with a microwave movement sensor. Please see below detailed operating instructions.

#### Technical Specifications:

Operating voltage		220 ~ 240V AC 50/60Hz				
Rated load		400W (Capacitive load) 800W (Resistive load)				
Stand-by power		≤0.5W				
Sensitivity	Ceiling mounted height: 3m	100% / 75% / 50% / 25% / 10%				
	Ceiling mounted height: 6m*	100% / 75% / 50%				
	Wall mounted height: 2m	100% / 75% / 50% / 25% / 10%				
Hold-time		5s / 30s / 90s / 3min / 20min / 30min				
Daylight sensor		2Lux / 10Lux / 25Lux / 50Lux / Disable				
Microwave frequency		5.8 GHz ±75MHz				
Transmitting power		1mW Max.				
Detection range	Ceiling mounted height: 3m	3- 6m (radius )				
	Wall mounted height: 1.5-2m	12-15m				
Detection angle		360º (Ceiling) / 120º (Wall)				
Working temperature		$-20^{\circ}C \sim 60^{\circ}C$				

220~240V output control Adjustable detection are Davlight threshol 50-2 N Control Gear

Daylight sensor

# Instruction manual


# **HeroPro Mini CCT Microwave**

103936

# \*50%, 75%, 100% detection sensitivity is workable when installed at 6m mounting height. Only 10%, 25% sensitivity is not able to detect motion signal. Settings:

#### 1 Concitivity

Sensitivity of combination applications	an be n on th					
I-100%	-		1	2	3	
II – 75%	, E	Ι				100%
III – 50%	ņ	II	$\bigcirc$			75%
IV – 25%	0	III		0		50%
V- 10%		IV	$\bigcirc$	0		25%
		V	$\bigcirc$	0	0	10%

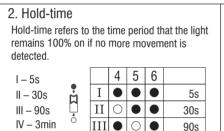

V ● ● ○ 20min

VI 0 0 30min

3min


IV

#### 3. Daylight sensor

Different daylight threshold can be preset on DIP switches. Light will always turn on upon movement if daylight sensor is disabled.

25Lux

50Lux

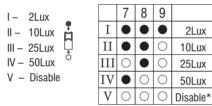

\*Disable means the daylight sensor does not work. The sensor will tur on light once motion is detected regardless of ambient light level.

#### Trouble shooting:

Malfunction Cause Remedy	Cause	Remedy	
	Incorrect light-control setting selected	Adjust daylight threshold setting	
The light will not come on	Faulty lamp	Replace lamp	
	No power supply	Check power to sensor	
The lamp is always on	Continuous movement in the detection zone	Check detection area setting	
<b>-</b>	The sensor is not mounted for reliably detecting movement	Securely mount enclosure	
The lamp is on without any identifiable movement	Movement occurred, but not identified by the sensor (Movement behind wall, movement of small object in immediate lamp vicinity etc.)	<ol> <li>Reduce sensitivity.</li> <li>Check the movement behind walls to avoid facilities such as water pipe, fan, which may mis-trigger the sensor.</li> </ol>	
The lamp will not work despite movement	Rapid movements are being suppressed to minimize malfunctioning or the detection radius is too small.	Check detection area setting	

#### **Care and Safety**

We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish. For your safety, always switch off the power supply before cleaning.


V – 20min

VI – 30min

For further information, please visit https://www.lighting-info.co.uk/103936

V6 04/08/2023 UK Manufacturer: BH17 7BY EU Manufacturer: Brilliant AG, Brilliantstrasse 1, D-27442 Gnarrenburg



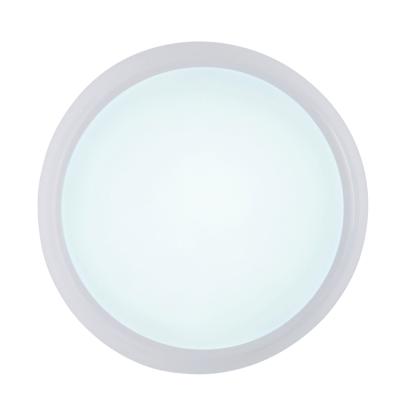




#### Warning

This light fitting is double insulated and does not require connection to an earth circuit.

Please read these instructions carefully before commencing any work. This unit must be fitted by a competent and gualified electrician. Install in accordance with the IEE Wiring regulations and current Building Regulations.

Check the pack and make sure you have all the parts listed.

### Technical data

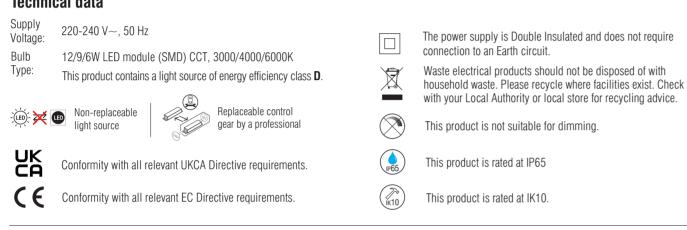

## Layout

Plan the desired layout of these fittings carefully, ensuring the cables will reach the distances between each light fitting.

Avoid locating any cables in positions that would cause a hazard. Position cables and junction boxes (not supplied) away from areas where they may be at risk from being cut, trapped or damaged.

## Installation

Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, carefully note the position of each set of wires.

Note the switch is turned off before installation.

The ceiling surface must be flat and smooth to ensure a good fit.

Ensure that the screws and cable entry points are sealed to maintain the IP rating of the product.

- Twist and remove the lamp cover from the product, keep safe for refitting later. Pull the cable through the cable entry hole and seal to maintain the IP rating
- Turn the clip to loose the LED tray in the rear casing.
- Using the rear casing as a template mark the position to drill out the fixing holes. Take care to avoid damaging any concealed wiring and pipes.
- Fix the rear casing into the position using the installation plugs and screws.



12W 9W

installation.

The colour is changeable between 3000/4000/6000K using the CCT switch on the driver before installation. 6000K 4000K 3000K

The wattage is changeable between 12W/9W/6W wattage using the wattage switch on the driver before

and wire as detailed Wiring Diagram.

the power supply is at the bottom.

To prevent electrocution switch off at the mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical

This light fitting should be connected to a circuit with a 30mA RCD fitted.

Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your local authority or retailer

The mains supply cable must have a minimum cross section area of 1.0mm<sup>2</sup>.

The products can be wall or ceiling mounted. If wall mounting ensure that

Cables must be protected using suitable conduit or plastic trunking.

• Refit the LED tray back into the rear casing and lock the clip.

• Twist the lamp cover back onto the product and lock in place.

• Replace fuse or circuit breaker and switch on. Your light is now ready for use.

If replacing an existing fitting, make a careful note of the connections.

If you are in any doubt, please consult a qualified electrician.

supply without your knowledge.


for recycling advice.


Choose your preferred wattage and colour before installing by wattage switch or CCT switch on the driver. Note: Befeore you change the wattage or colour, please turn off the power switch for safety.

0 **B** ...... 6

## Wiring

Having correctly identified the wiring from your existing light fitting, pull the mains wire through the hole and connect to the quick fit connection block in the following way. No tools are necessary.

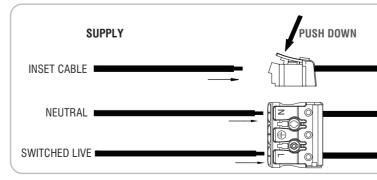

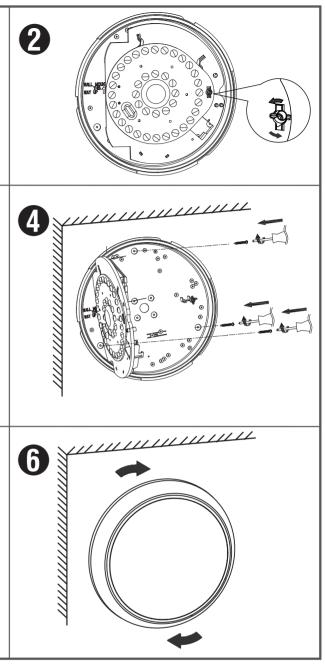

LIGHT FITTING

BLUE (N	)
---------	---

BROWN (L)

#### Check that...

You have correctly identified the wires. The connections are tight. No loose strands have been left out of the connection block.